


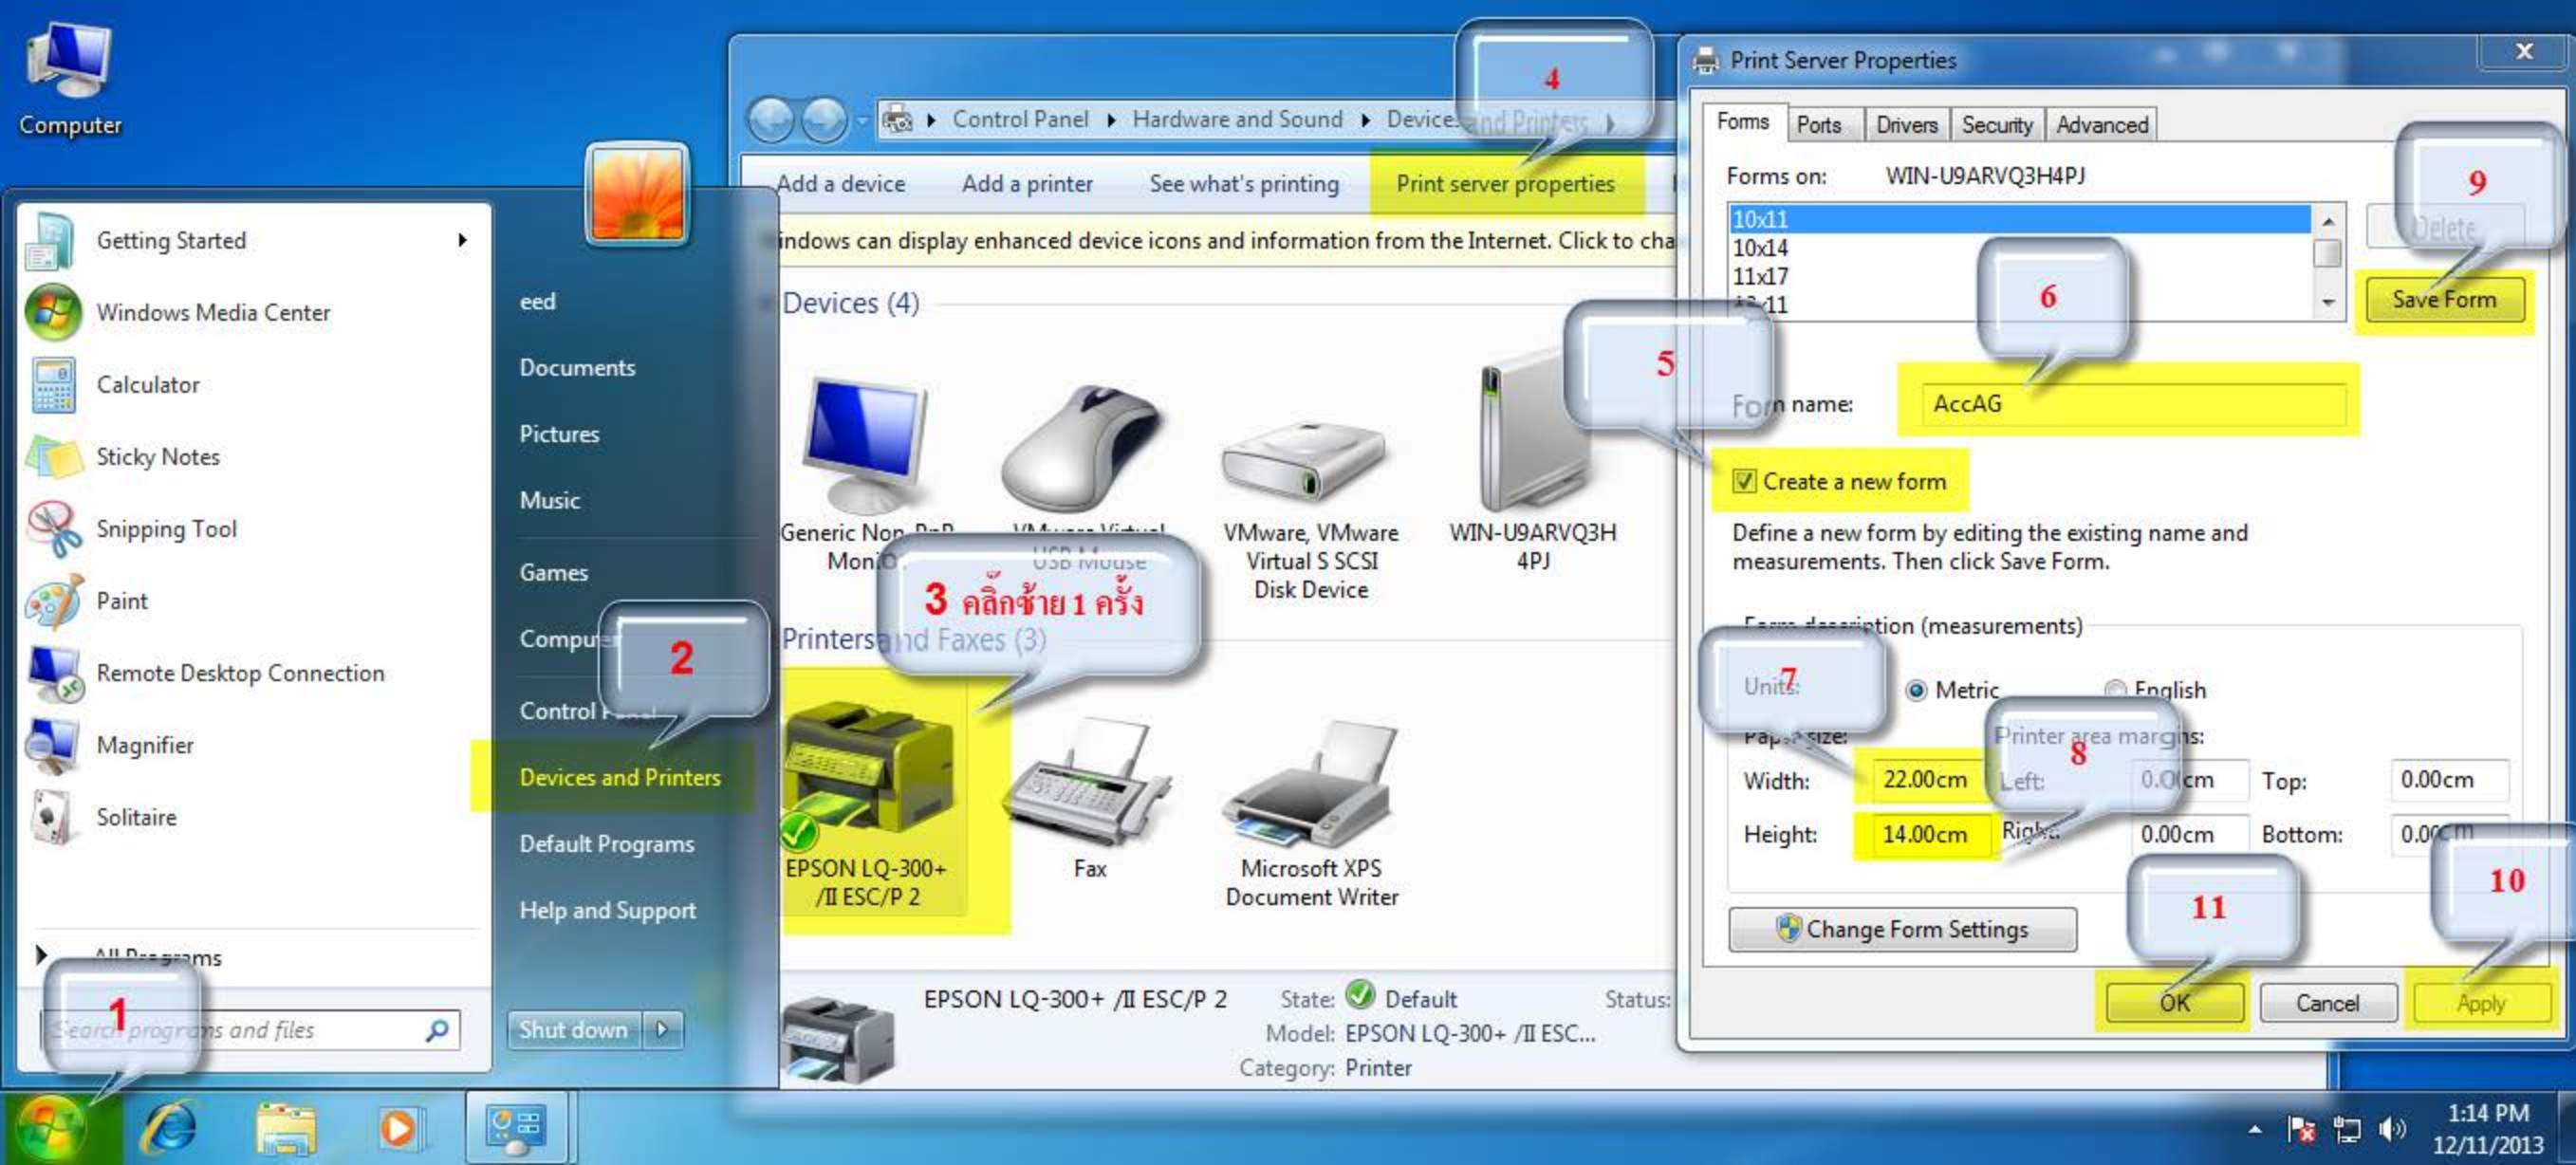



Computer

Getting Started

Windows Media Center

Calculator

Sticky Notes

Snipping Tool

Paint

Remote Desktop Connection

Magnifier

Solitaire

All Programs

Search programs and files

Computer

Control Panel

Devices and Printers

Default Programs

Help and Support

2

3 คลิกขวา

Control Panel > Hardware and Sound > Devices and Printers

Add a device Add a printer See what's printing Print server properties Remove device

Windows can display enhanced device icons and information from the Internet. Click to change...

Devices

Printers

EPSON LQ-300+ /II ESC/P 2

Fax

Microsoft XPS Document Writer

WIN-U9ARVQ3H 4PJ

EPSON LQ-300+ /II ESC/P 2 State: Default Model: EPSON LQ-300+ /II ESC... Category: Printer Status: 0 document(s) in queue

Open

Open in new window

See what's printing

Set as default printer

Printing preferences

Printer properties

Create shortcut

Troubleshoot

Remove device

Properties

4

1:19 PM
12/11/2013

EPSON LQ-300+ /II ESC/P 2 Properties

General | Sharing | Ports | Advanced | Color Management | Security | **Device Settings**

EPSON LQ-300+ /II ESC/P 2

Location:

Comment:

Model: EPSON LQ-300+ /II ESC/P 2

Features

- Color: Yes
- Double-sided: No
- Staple: No
- Speed: Unknown
- Maximum resolution: 360 dpi

Paper available: Letter

Preferences...

OK

10

EPSON LQ-300+ /II ESC/P 2 Printing Preferences

Layout | Paper/Quality | User Defined Paper | Extension Settings

Orientation:

Page Order:

Page Format

Pages per Sheet:

☐ Draw Borders

OK

Cancel

Apply

6

EPSON LQ-300+ /II ESC/P 2 Advanced Options

EPSON LQ-300+ /II ESC/P 2 Advanced Document Settings

- Paper/Output
 - Paper Size:
 - Copy Count:
- Graphic
 - Print Quality:
- Image Color Management
 - ICM Method:
 - ICM Intent:
- Document Options
 - Advanced Printing Features:
 - Pages per Sheet Layout:
 - Color Printing Mode:
 - Halftoning:
 - Print Optimizations:
- Printer Features
 - Print Quality:

OK

Cancel

7

8

9

